





Wall Panels

10' Flat Wall Panel 8"

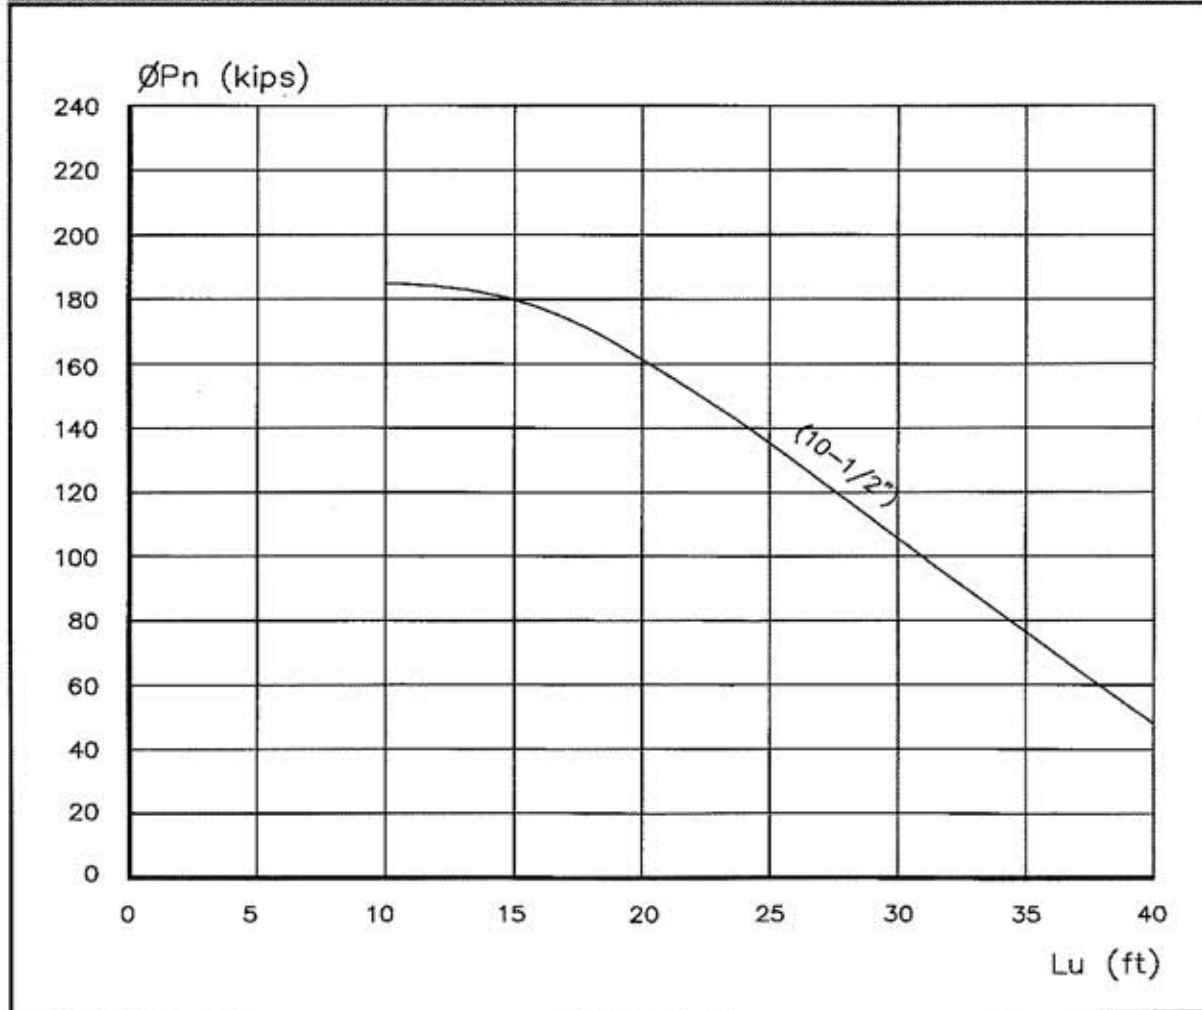

SECTION

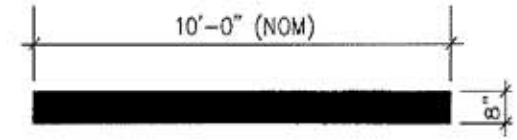

USE OF CURVES:

1. Enter at left with applied factored **superimposed** axial load P_u .
2. Enter at bottom with effective height of wall L_u .
3. Intersection point P_u , L_u must be to the left of the curve indicating the strand pattern of the panel.
4. Design curves include the effect of wind loads according to SBC. $f'_c = 5000$ psi.

NOTATION:

ϕP_n = Design axial strength of panel
 L_u = Effective height of panel

Note: This load table is based on ACI-318, 1999.